 

8300 SINGLE BAR TRACTOR REMOTE FUNCTIONS

Quick Reference Sheet (2012)




2) Lowers main wing kick function

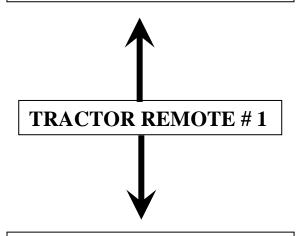


- 1) Lifts center section
- 2) Kicks main wings up

- 1) Unfolds main wings down from transport to field position
- 2) Applies down pressure to main wings (must leave tractor remote engaged when toolbar is in the ground)

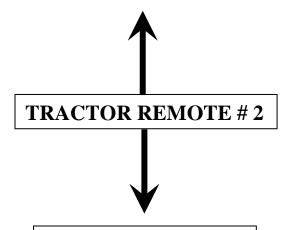

- 1) Disengages down pressure
- 2) Folds main wings up into transport position

1) Unfolds flip wings down into field position

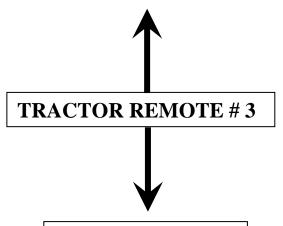

1) Folds flips wings up into transport position